



WARNING!


JUST PUTTING IT ON IS NOT ENOUGH
FIT IT RIGHT!

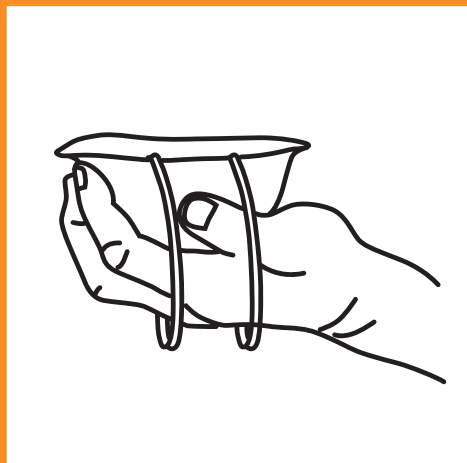


Place mask in palm of hands with straps hanging free

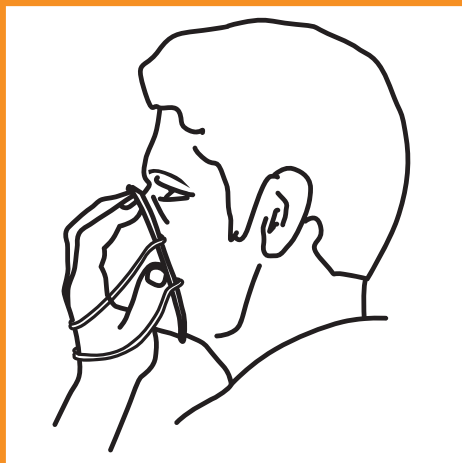


Hold mask in position on face

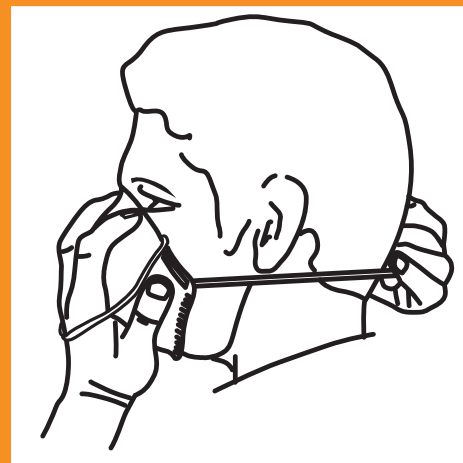


Pull lower strap over head and place below ears on neck

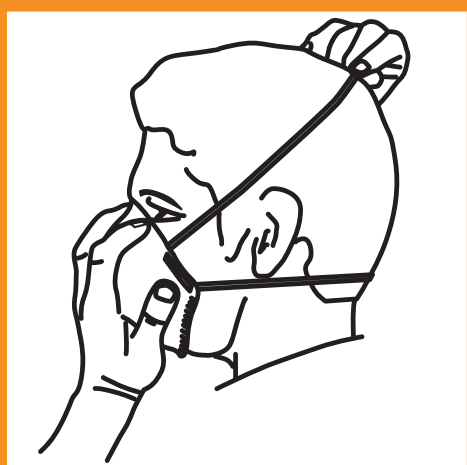

Place other strap on crown of head above ears

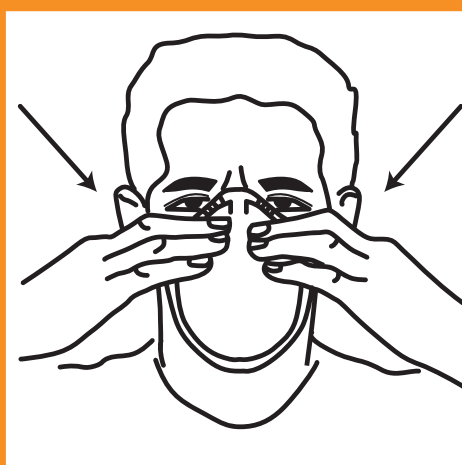

Adjust noseband/ head strap* and ensure mask is tight on face

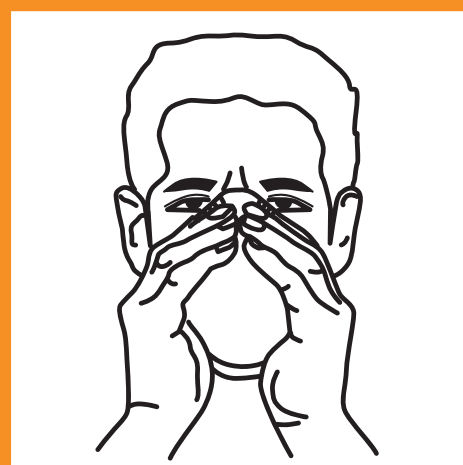

Make final adjustments and test fit of mask

* Respirators with adjustable head strap only

CAUTION: Tight fitting respirators should only be worn when clean shaven.

Tel: 01461 202452
www.alphasolway.com

Alpha
Solway